







Parker domnick hunter's continued focus on process optimization and control has led to the development of a new range of prefilters for the clarification and pre-stabilization stages of wine processing and packaging.

The control of particulate and microbial loading is important to provide stability to wine during storage and transport and to ensure that the finished product maintains and develops its desirable characteristics after packaging.

Parker domnick hunter's next generation of PREPOR NG filters have been developed to remove yeast and reduce bacterial loading to improve short-term stability and to increase the service life of downstream membrane filters. The robust componentry allows for caustic and backwash regeneration, making the filter stage a reliable and cost-effective solution to intermediate stabilization.


Features

- I Fully validated yeast removal and bacterial reduction
- Truly optimized graded density using unique Optimized Depth Construction (ODC) Technology
- Mechanically strong and chemically resistant polypropylene construction designed for chemical CIP and backwash


Benefits

- I Effective control of clarity and microbial stability
- Increased filtration capacity
- Increased service life when combined with regular CIP regeneration

Performance Characteristics

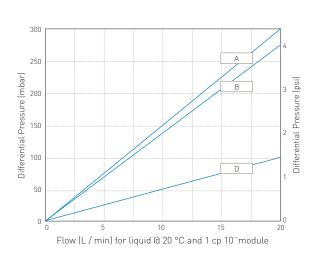

Filtration Stage

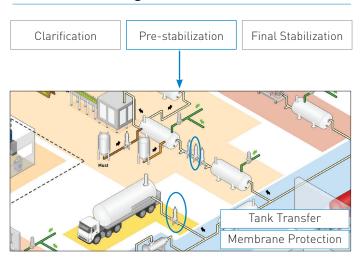



Specifications

Materials of Construction

■ Filtration Media: Polypropylene ■ Upstream Support: Polypropylene Downstream Support: Polypropylene Inner Support Core: Polypropylene Outer Protection Cage: Polypropylene I End Caps: Polypropylene 316L Stainless Steel I End Cap Insert: Silicone / EPDM O-rings:

Food Contact Compliance

Materials conform to the relevant requirements of FDA 21 CFR Part 177, current EC1935 / 2004 and current USP Plastics Class VI - 121 °C.

Recommended Operating Conditions

Up to 70 °C (158 °F) continuous operating temperature and higher short-term temperatures during CIP to the following limits:

Temperature		Max Forward dP	
°C	°F	(bar)	(psi)
20	68	5.0	72.5
40	104	4.0	58.0
60	140	3.0	43.5
80	176	2.0	29.0
90	194	1.0	14.5
>100 (steam)	>212 (steam)	0.3	4.0

Effective Filtration Area (EFA)

10" (250 mm) Up to 0.5 m² (5.38 ft²)

Cleaning and Sterilization

PREPOR NG cartridges can be repeatedly steam sterilized in-situ or autoclaved up to 135 °C (275 °F). They can be sanitized with hot water up to 90 °C (194 °F), are compatible with a wide range of chemicals and can be backwashed. Please refer to our Clean-in-Place Support Guide or contact your local Parker representative for more information.

Retention Characteristics

The absolute retention characteristics of PREPOR NG filters have been validated by challenges performed with the following organisms.

Organism	LRV who	LRV when challenged with a minimum of 10 ⁷ cfu per cm ²			
		А	В	D	
Saccharomyces	cerevisiae	FR	FR	FR	
Brettanomyces L	bruxellensis	FR	FR	FR	
Oenococcus oen	Oenococcus oenos		3.0	1.0	
Acetobacter oen	i	2.0	2.0	1.7	
Serratia marces	cens	3.9	3.4	1.9	

*FR - Fully retentive during challenge

When expressed as titre reduction "FR" equates to > 10" per 10" module.




Optimized Depth Construction (ODC provides a unique graded density combining longer service life with absolute filtration efficiency.

Manufacturing Traceability


Each filter cartridge displays the product name, product code and lot number. Additionally, each module displays a unique serial number providing full manufacturing traceability.

Performance Benefits

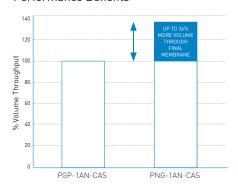

ODC technology combines fine particle retention with increased strength and stability to enhance the performance offered by the PREPOR range.

Ordering information

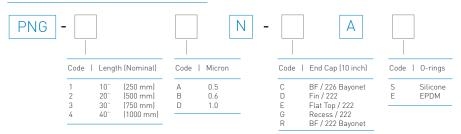

VSH & HSL HOUSING RANGE AVAILABLE

